

PEC+ Saver user manual

The PEC+ Saver is an innovative and easy-to-use product that allows you to store your PEC Plus configuration and settings.


The PEC+ Saver stores a complete copy of all a PEC Plus' configuration and settings. You can restore the configuration and settings any time, or even use them to set up new PEC Plus' in seconds!

Features

- ◆ Quick and easy to use
- ◆ Portable, reliable, and safe storage of configuration and settings
- ◆ Transferable to any PEC Plus that has the same firmware version
- ◆ Compact design—fits in a pocket
- ◆ 90-day limited warranty

To save your settings

1. Loosen the four screws in the PEC Plus enclosure and then gently remove the cover. Make sure not to disconnect the ribbon cable.
2. Insert the PEC+ Saver into the connector marked SAVER on the inside top-left of the cover.
3. Press **Function** until the LED for CONFIGURATION is lit.
4. Press **Up** or **Down** until **SAVE** is displayed and then press **Select**. The display shows **no**. If the PEC+ Saver is not in correctly, the display shows **Err3**.
5. Press **Up** or **Down** to change the **no** to **YES** and then press **Select**. The control saves the settings to the PEC+ Saver. When complete, the display shows **done**.
6. Press **Back** twice to return to the main display.
7. Remove the PEC+ Saver
8. Replace the cover and then tighten the four screws.

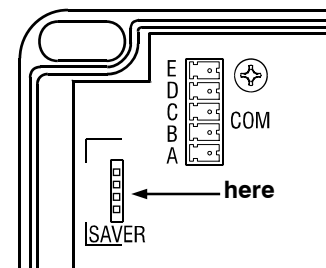

● CONFIGURATION

SAVE

no

done

To restore your settings

1. Loosen the four screws in the PEC Plus enclosure and then gently remove the cover. Make sure not to disconnect the ribbon cable.
2. Insert the PEC+ Saver into the connector marked SAVER on the inside top-left of the cover.
3. Press **Function** until the LED for CONFIGURATION is lit.
4. Press **Up** or **Down** until *rESt* is displayed and then press **Select**. The display shows *no*. If the PEC+ Saver is not in correctly, the display shows *Err3*.
5. Press **Up** or **Down** to change the *no* to *YES* and then press **Select**. The control restores the settings from the PEC+ Saver. When complete, the display shows *dOnE*.
6. Press **Back** twice to return to the main display.
7. Remove the PEC+ Saver
8. Replace the cover and then tighten the four screws.

● CONFIGURATION

The LED display shows the word "rESt" in a red, seven-segment font. The 'r' is lowercase, 'E' is uppercase, 'S' is uppercase, and 't' is lowercase.The LED display shows the word "no" in a red, seven-segment font. Both 'n' and 'o' are lowercase.The LED display shows the word "dOnE" in a red, seven-segment font. 'd' and 'n' are lowercase, 'O' is uppercase, and 'E' is uppercase.**Phason Inc.**

2 Terracon Place
Winnipeg, Manitoba, Canada
R2J 4G7

Phone: 204-233-1400
Fax: 204-233-3252

E-mail: support@phason.ca
Web site: www.phason.ca